

CARE

Surface wash only with damp cloth. Do not immerse this product in water or any other liquid.

CUSTOMER SUPPORT

For more information about First Act® products contact Consumer Relations toll free at 888-551-1115 or email info@firstact.com



Crawl n' Go Drum™



First Act Inc.
745 Boylston Street
Boston, MA 02116

First Act, First Act Discovery
Little First Act Discovery, and
the Little First Act Discovery logo
are trademarks of First Act Inc.
© 2008 First Act Inc.
All rights reserved.
LF204.M.01
Printed in China

visit us at littlefirstactdiscovery.com

Includes:
Maraca, tambourine, and castanet

6m+

Crawl n' Go Drum™

BEFORE USE

This product has a plastic tab attached for in-store "try me" demonstration. When you remove the product from the package, the tab should detach from the product. Please check the back of the product to be sure tab has detached. If not, pull tab from battery compartment before use.

⚠️WARNING: Keep small parts like the plastic tab out of children's reach. Dispose of the plastic tab upon removal.

PLAY

Mode Switch

The mode switch is located on the side of the drum. Switch product to **OFF** when not in use to preserve battery life.



Mode switch



🎵 Drum Mode
Press the keys to play steel drum notes and illuminate keys


🎵 Song Mode
Press the keys to play steel drum songs and illuminate keys

Crawling Mode

Crawling Mode is active in both **Drum Mode** and **Song Mode**. When the drum is rolled on its side, a crawl-along song plays and keys light up. The song stops when the drum stops.

Percussion Instruments/Storage

Press the release button to open the drum lid. Maraca, tambourine, and castanet can be stored inside the drum.

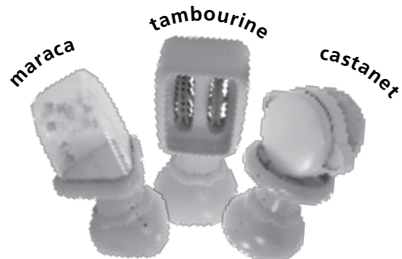


BATTERIES

Requires 3 x AA Batteries (included).

Replacing the Batteries

1. Use a Phillips head screwdriver (not included) to loosen screws in battery compartment door. Open the compartment cover. Position the batteries in the compartment and make sure that the (+) and (-) are in the correct position. Replace compartment cover, re-tighten screws with Phillips head screwdriver. Do not over-tighten screws.
2. To ensure proper safety and operation, **batteries must always be replaced by an adult**. Never let a child use this product unless the battery door is secured.
3. Keep batteries away from small children. Immediately and safely dispose of all used batteries.

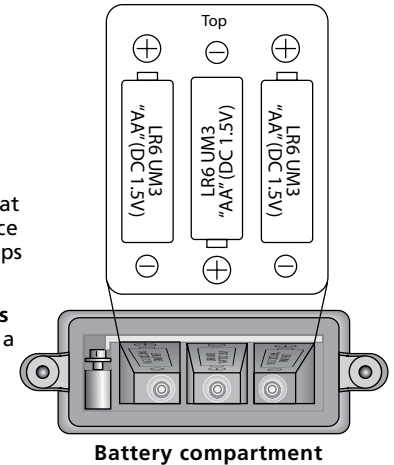

⚠️WARNING:

NEVER leave child unattended with this product.
ALWAYS use with adult supervision.
NEVER mix old and new batteries.
NEVER mix alkaline, standard, or rechargeable batteries.
ALWAYS remove batteries when product is stored for an extended period of time or when batteries are exhausted.

Dispose of exhausted batteries properly.

Note: We recommend using alkaline batteries for longer battery life.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Note: This product has no consumer serviceable parts. Do not take this product apart.